

TECHNICAL SERVICE BULLETIN

NO. **74-B-3**



Austin MG

May, 1974


SUBJECT:
1974 WIRING DIAGRAM.

MODELS:
MGB & MGB/GT

Illustrated overleaf is the wiring diagram applicable to the 1974 MGB and MGB/GT.

J.P.

WIRING DIAGRAM

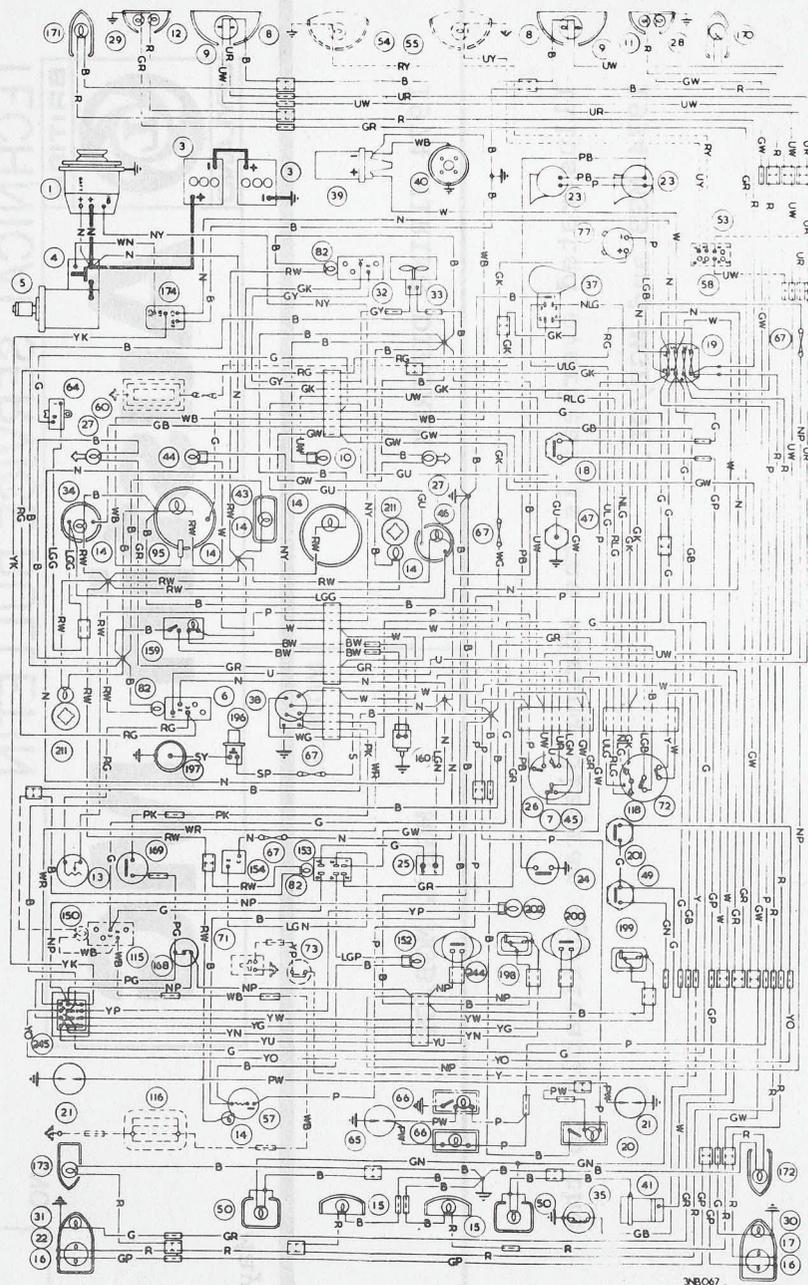

KEY TO THE WIRING DIAGRAM

1. Alternator.
3. Batteries (6-volt).
4. Starter solenoid.
5. Starter motor.
6. Lighting switch.
7. Headlamp dip switch.
8. Headlamp dip beam.
9. Headlamp main beam.
10. Headlamp main beam warning lamp.
11. R.H. parking lamp.
12. L.H. parking lamp.
13. Panel lamp rheostat switch.
14. Panel illumination lamp.
15. Number-plate illumination lamps.
16. Stop lamp.
17. R.H. tail lamp.
18. Stop lamp switch.
19. Fuse unit (4-way).
20. Interior courtesy lamp.
21. Interior lamp door switch.
22. L.H. tail lamp.
23. Horn.
24. Horn-push.
25. Flasher unit.
26. Direction indicator switch.
27. Direction indicator warning lamp.
28. R.H. front direction indicator lamp.
29. L.H. front direction indicator lamp.
30. R.H. rear direction indicator lamp.
31. L.H. rear direction indicator lamp.
32. Heater motor switch.
33. Heater motor.
34. Fuel gauge.
35. Fuel gauge tank unit.
37. Windscreen wiper motor.
38. Ignition/starter switch.
39. Ignition coil.
40. Distributor.
41. Fuel pump.
43. Oil pressure gauge.
44. Ignition warning lamp.
45. Headlamp flasher switch.
46. Coolant temperature gauge.
47. Coolant temperature transmitter.
49. Reverse lamp switch.
50. Reverse lamp.
53. Fog lamp switch.*
54. Fog lamp.*
55. Driving lamp.*
57. Cigar lighter—illuminated.
58. Driving lamp switch.*
60. Radio.*
64. Instrument voltage stabilizer.
65. Luggage compartment lamp switch.
66. Luggage compartment lamp.
67. Line fuse.
71. Overdrive solenoid.*
72. Overdrive manual control switch.*
73. Overdrive gear switch.*
77. Windscreen washer pump.
82. Switch illumination lamp.
95. Tachometer.
115. Heated back-light switch* } GT only.
116. Heated back-light* }
118. Combined windscreen washer and wiper switch.
150. Heated back-light warning lamp* (GT only).
152. Hazard warning lamp.
153. Hazard warning switch.
154. Hazard warning flasher unit.
159. Brake pressure warning lamp and lamp test-push.
160. Brake pressure failure switch.
168. Audible warning buzzer.
169. Ignition key audible warning door switch.
170. R.H. front side-marker lamp.
171. L.H. front side-marker lamp.
172. R.H. rear side-marker lamp.
173. L.H. rear side-marker lamp.
174. Starter solenoid relay.
196. Running-on control valve.
197. Running-on control valve oil pressure switch.
198. Driver's seat belt buckle switch.
199. Passenger's seat belt buckle switch.
200. Passenger seat switch.
201. Seat belt warning gearbox switch.
202. 'Fasten belts' warning light.
211. Heater control illumination lamp.
244. Driver's seat switch.
245. Sequential seat belt control unit.

* Optional fitment circuits shown dotted.

CABLE COLOUR CODE

N. Brown.	P. Purple.	W. White.	K. Pink.
U. Blue.	G. Green.	Y. Yellow.	O. Orange.
R. Red.	LG. Light Green.	B. Black.	S. Slate.

When a cable has two colour code letters the first denotes the main colour and the second denotes the tracer colour.